



ASSEMBLY INSTRUCTIONS


EDMUND BED



PARTS LIST

| | |
|----------------------|----|
| VERTICAL POST- | 4 |
| FOOTBOARD- | 1 |
| SIDE RAILS- | 2 |
| HEADBOARD- | 1 |
| SLAT KIT- | 1 |
| HEADBOARD STRETCHER- | 1 |
| CANOPY RAIL- | 4 |
| CANOPY BRACKET- | 4 |
| BRACKET SCREW- | 16 |

Made
in
LA

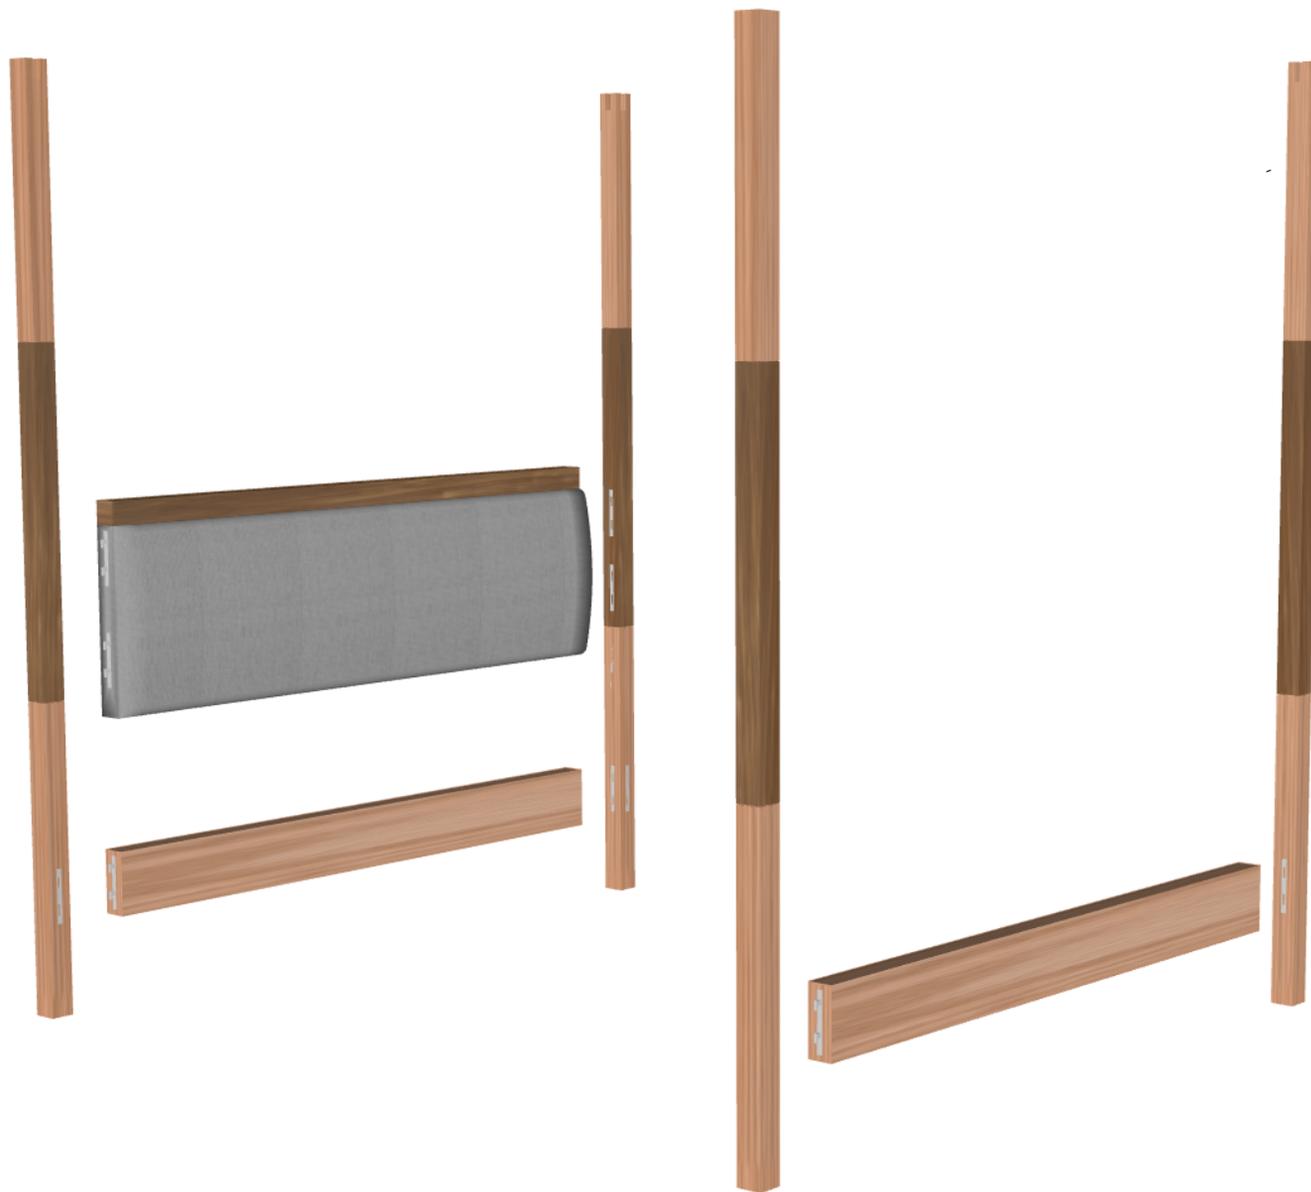

STEP 1:

- FIT FOOT RAIL TO VERTICLE POST
- PRESS DOWN TO ASSURE A TIGHT FIT
- NOTE: A NON-MARRING RUBBER Mallet MAY BE USED

STEP 2:

- FIT HEADBOARD BASE RAIL AND HEADBOARD UPHOLSTERED PANEL TO VERTICLE POST
- PRESS DOWN TO ASSURE A TIGHT FIT
- NOTE: A NON-MARRING RUBBER Mallet MAY BE USED

Made
in
LA



STEP 3:

- FIT SIDE RAILS TO FOOTBOARD AND HEADBOARD ASSEMBLY
- PRESS DOWN TO ASSURE A TIGHT FIT
- NOTE: A NON-MARRING RUBBER Mallet MAY BE USED


Made
in
LA

Page 3 of 4



STEP 4:

- INSTALL CANOPY RAILS
- AFFIX CANOPY RAILS USING PROVIDED BRACKETS AND SCREWS
- NOTE: A NON-MARRING RUBBER MALLETT MAY BE USED

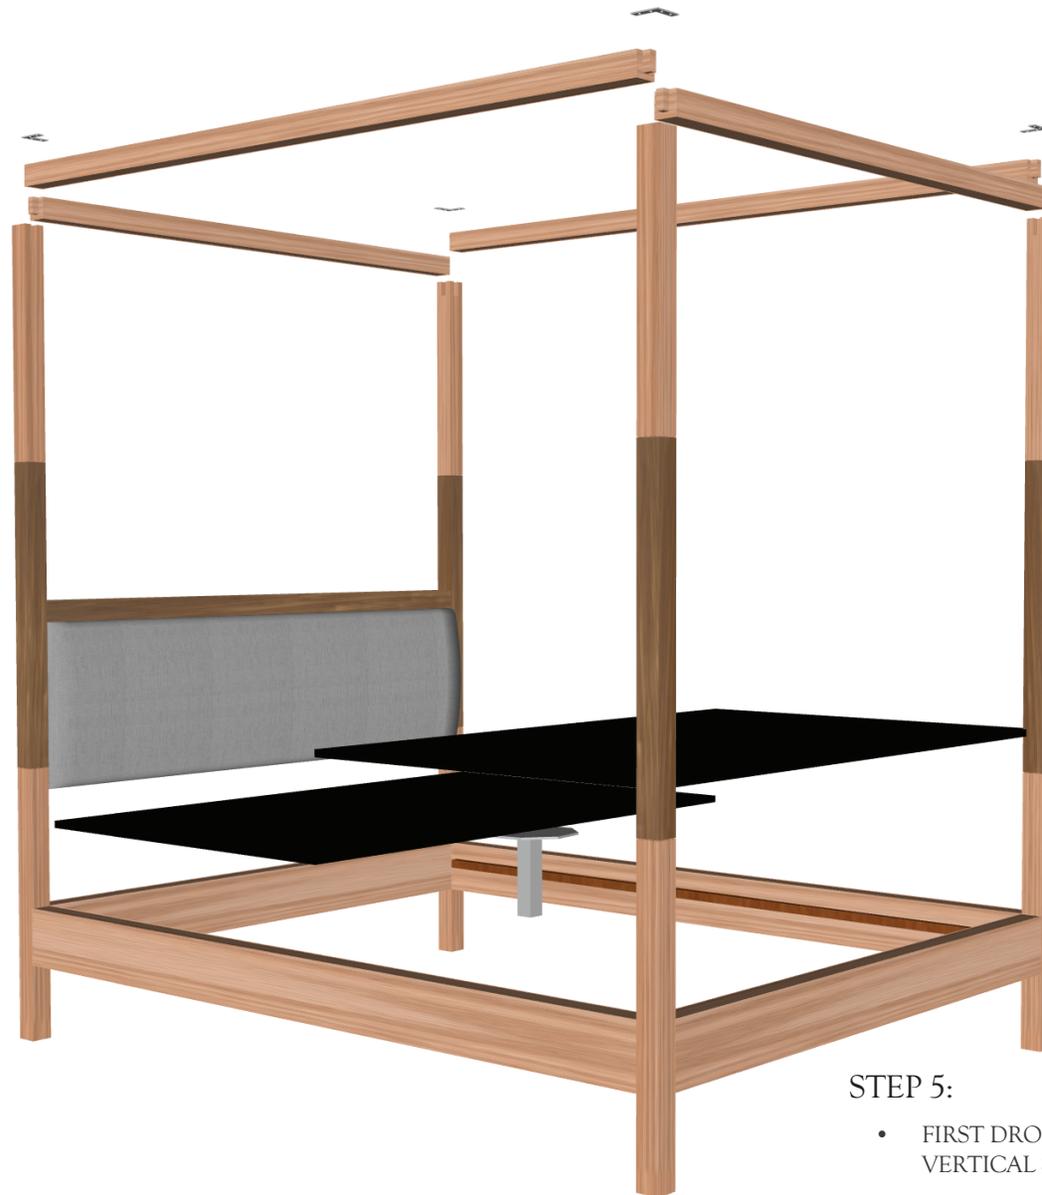

STEP 5:

- FIRST DROP PLATFORM WITH VERTICAL SUPPORT
- DROP IN SECOND PLATFORM

Made
in
LA